



Casio Exilim EX-Z70 Camera Casing Replacement

This guide will show how to remove the casing of the camera so that the inner parts can be accessed.

Written By: Paul Fallon



INTRODUCTION

In order to fully investigate what is going wrong in the camera, the casing might need to be removed. This guide will take you through step-by-step directions in revealing the inner parts of the camera.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Camera Casing



- Remove the strap from the camera by pulling the thin cord out, creating a small loop, then pushing the thicker cord back through this loop.

Step 2



- Remove the two phillips screws (2.83 mm) from the left side panel of the camera casing.
 - The left panel can now be removed. However, one piece of tape attaches it to the camera, so a spudger may be required to ease the panels off.
 - Repeat for the right side panel of the camera.
- i** Keep track of which screws go where. There are a couple sets of screws to take out and they are all small and look the same.

Step 3





- Remove the 6 phillips screws (3.69 mm) from the bottom of the camera casing.

Step 4





- Remove the 2 phillips screws (2.79 mm) on the left side of the camera where the metal panel used to be.
- Repeat for the 2 phillips screws (2.79 mm) right side of the camera.

Step 5

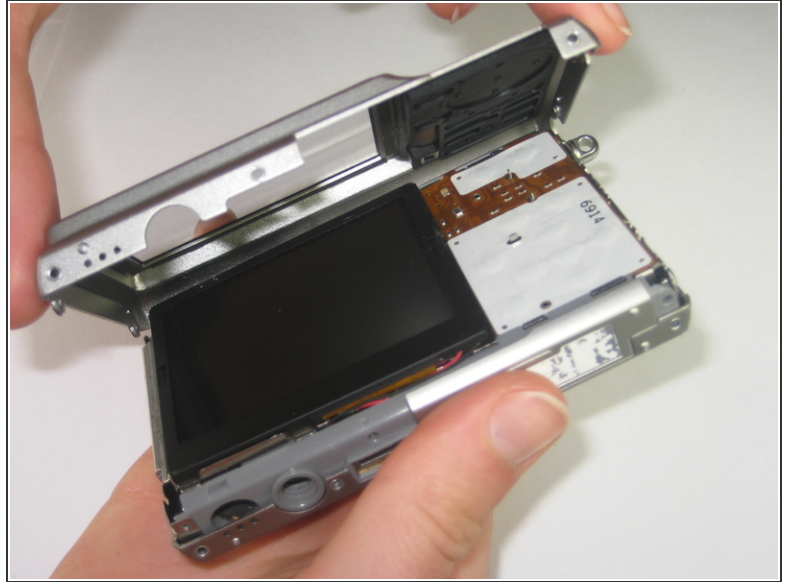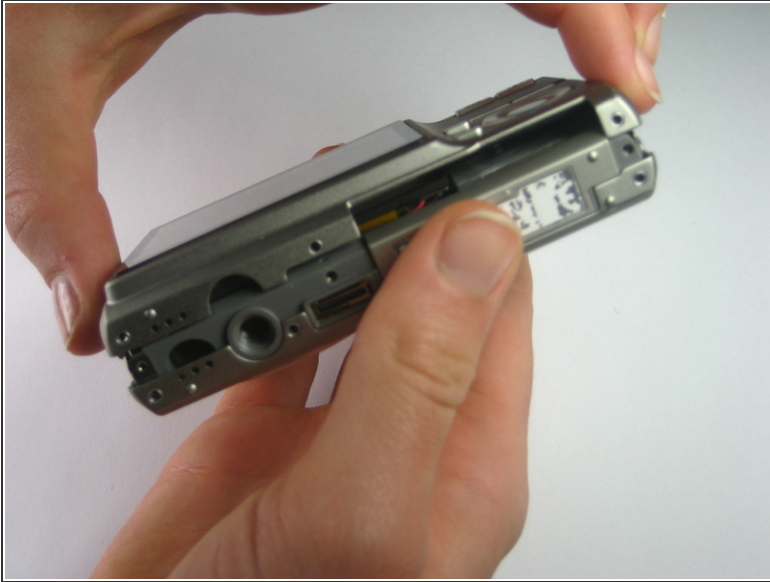



- With the LCD screen facing up towards you, start at the bottom of the camera and gently pull off the back of the casing.

Step 6

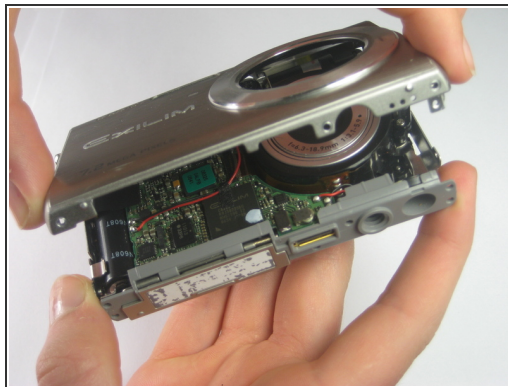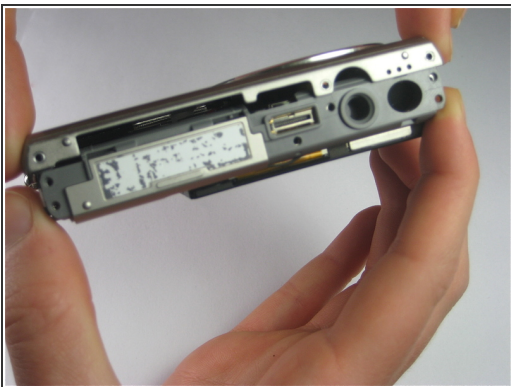


- With the front side (with the lens) facing up towards you, start at the bottom of the camera and gently pull off the front of the casing.
- ⓘ The nob that previously held the camera strap will no longer be attached to the camera once you remove the camera casing. When putting the camera back together, remember to put the nob back into position before replacing the casing.

Step 7

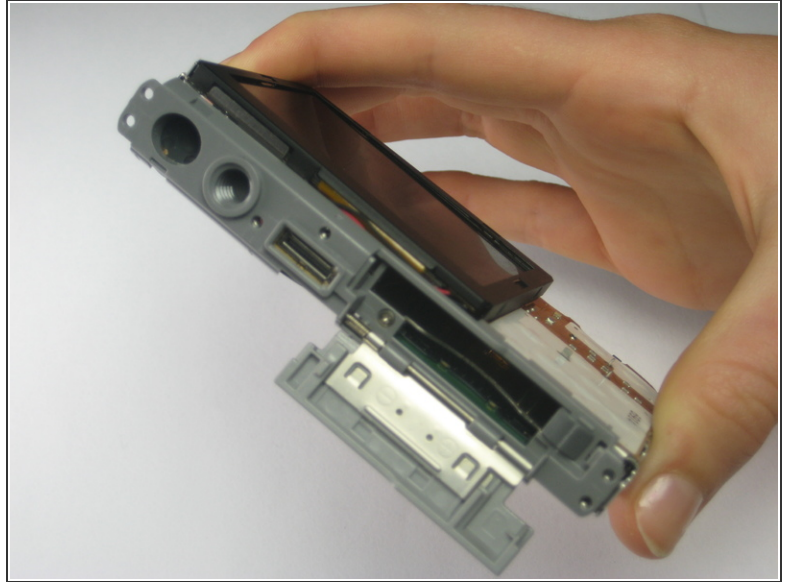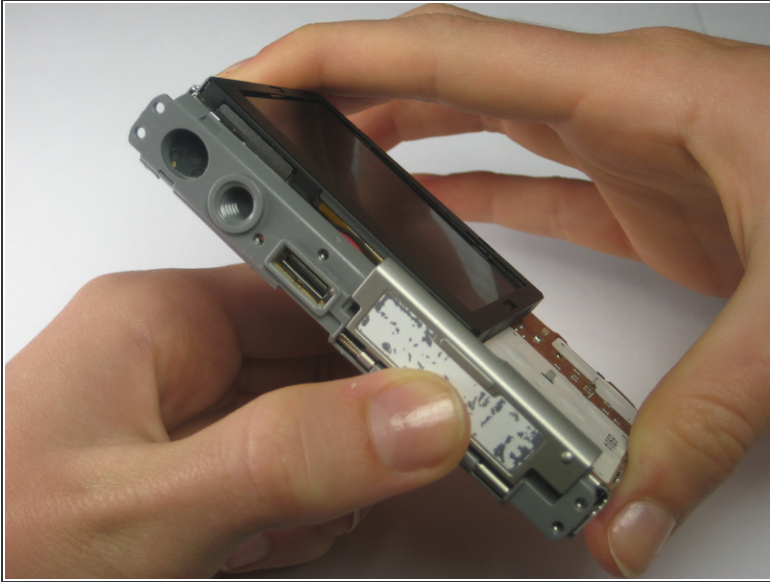

- Slide the labeled piece toward the LCD screen and release.
- The tab will spring open.

Step 8

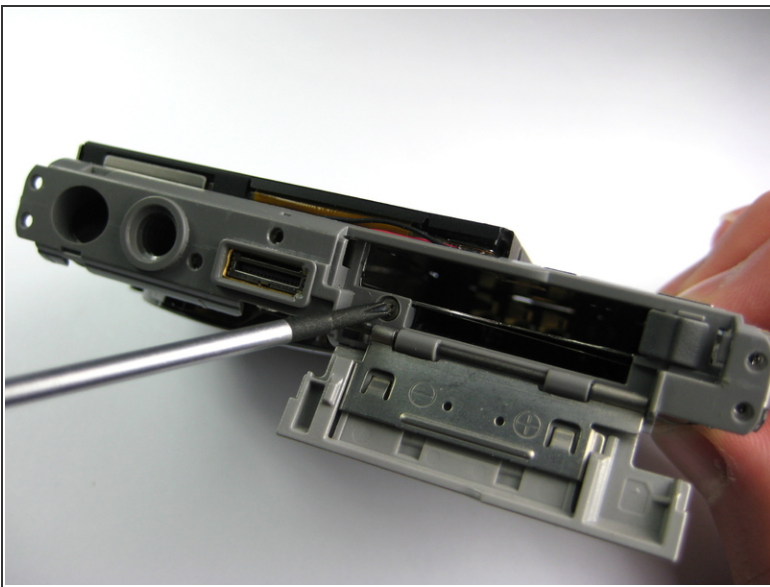

- Look at the bottom of the camera. Take out the phillips screw (1.77 mm) holding on the bottom plastic piece.
- The bottom plastic piece is held on to the main frame of the camera only by two thin wires.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 11:27:34 AM.